

Table of contents

- C0201 Invalid parameters ->S-0-0423

C0201 Invalid parameters ->S-0-0423

When the command C0200 for activating the operating mode is executed ["Subdevice STM: C0200 Activate operation mode" (0x2BD2:06 / S-0-0422 / --)], internal variables are initialized and the available parameters are checked (e.g., for validity). An error was detected in the process.

Cause	Remedy
Data block elements required in operating mode are missing or invalid	Write allowed operating data to affected parameters. [For affected parameters, refer to "IDN list generic: Invalid data" (0x2B64:06 / S-0-0423 / --)]

► Attributes