

Table of contents

- Velocity command value adjustment: Control effort (0x60FA:00 / P-0-0563 / --)

Velocity command value adjustment: Control effort (0x60FA:00 / P-0-0563 / --)

Function

The parameter displays the velocity command value that is transferred to the velocity controller for command value preprocessing.

See also [Speed controller](#)