

Table of contents

- IDN list generic: Invalid data (0x2B64:06 / S-0-0423 / --)

IDN list generic: Invalid data (0x2B64:06 / S-0-0423 / --)

Function

During status switching of the sub-device state machine to operating mode, the drive parameters are checked and converted on each status transition. If an error occurs while this is done, the faulty parameters are entered in this list. Additionally, incorrect parameters from other sources can be entered into the list. For example by command S-0-0263 (/redirect/patternMatch?code=S-0-0263&redirectOrigin=ID1769349_252130326), "C2300 (/redirect/patternMatch?code=C2300&redirectOrigin=ID1769349_252130326) Load RAM command".

Status transitions:

- The transition to configuration mode after switching on or reset. This transition is realized automatically.
- The transition from configuration mode to parameterization mode (P-0-0504 (/redirect/patternMatch?code=P-0-0504&redirectOrigin=ID1769349_252130326), C1100 (/redirect/patternMatch?code=C1100&redirectOrigin=ID1769349_252130326) Activate parameterization mode command).
- The transition from configuration or parameterization mode into operating mode. (S-0-0422 (/redirect/patternMatch?code=S-0-0422&redirectOrigin=ID1769349_252130326), C0200 (/redirect/patternMatch?code=C0200&redirectOrigin=ID1769349_252130326) Enable operating mode command).

See also Basic functions of master communication (cdp-link://cdphelp?tkeyword=indrv.x.fk.fwa.FK_Grundfunktionen)

