

Table of contents

- SMO password: Entry (0x3018:02 / P-0-3230.0.1 / P-0-2468)

SMO password: Entry (0x3018:02 / P-0-3230.0.1 / P-0-2468)

Function

Parameter "P-0-3230.0.1" can be used to activate the safety technology. The password is used to lock or unlock the writability of all relevant safety-related parameters.

Structure

Password requirements:

- minimum 3 characters and maximum 10 characters
- allowed characters are "A – Z", "a - z" and the numbers "0 – 9"

If the safety password does not meet the requirements, the password entered will be discarded.



The initial password "INDRASAVE" and the "P-0-3235.0.1, SMO: Active axis ID" are not accepted as safety password.



Safety technology password handling is dialog-supported via the "ctrlX DRIVE Engineering" commissioning software.