

Table of contents

- SMO IO mapper 1: Type (0x3030:01 / P-0-3330.0.1 / --)

SMO IO mapper 1: Type (0x3030:01 / P-0-3330.0.1 / --)

Function

This parameter is used to configure the type of the IO mapper block as "type number". For example, a value of "1" is entered for the "safe connector" type (P-0-3331). Per link network (0...15) an instance of this parameter is available.

Structure

SMO: IO mapper inputs, type

P-0-3330.0.1	Module type	Comment
0	Inactive	
1	Safe connector	
2	Safe inversion	
3	Safe constant selection	
4	Binary-to-bit decoder	
5	Safe OR	
6	Safe AND with protection against restart	
7	Reserved	
8	Safe AND	as of SMO-14V04
9	Functional connector	as of SMO-14V04
10	Safe AND with ES bypass and protection against restart	as of SMO-14V04